 


5 INCH 1080P FULL HD Baby Monitor

User Manual

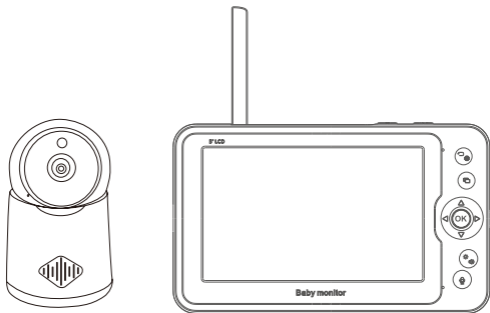 


- Notice :
- 1.Please fully charge the LCD monitor before the first use
 - 2.Please adjust the date and time to the local one before operation.


1.What's Included:




*1




*1

 

*1

 

*2

 

*2



*1

1.1: Camera*1

1.2: LCD Monitor*1

1.3: Mounting Bracket*1

 
 
1.4: Power Adaptor*2

1.5: Type-C Cable*2

 
 
1.6: Screws*1

1.7: User Manual*1

2.Key and Interface Introduction

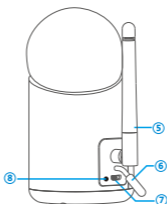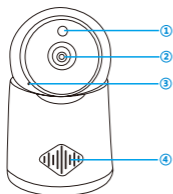

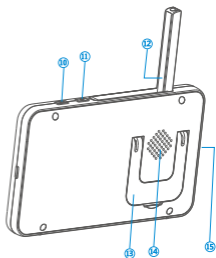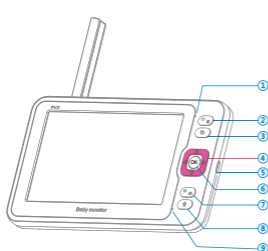

1. Light sensor
2. Lens
3. Sound pick up
4. Speaker
5. Antenna
6. Digital Temp Sensor
7. Type-C Port
8. Reset Button



2.1: Indicator Light: The light show green during working and red when charging. After the monitor fully charged turns to green.


2.2:  Back Button: ①In Monitoring Mode press the button to enter volume and brightness settings. ②In Main Menu press the button to back to Previous menu.


2.3:  Camera Switch Button: ①Press the button to switch camera from one to the next. (In the Status Bar will show the camera channel which working now)


②when the status bar show  means the monitor is under auto tour mode each camera image will stay for 10s.

2.4:  Direction Button: ①In Monitoring Mode the button could control the Pan and Tilt of the camera. ②In main menu the button could select direction.




2.5: Type-C Charging Port.

2.6: ①Normal Version:  OK button: Press the button to enter menu and confirm on settings . In other menus is confirm button.

2.7:  Lightness and volume Button: Press the button the monitor will show lightness and volume adjustment ,up and down key is to adjust lightness ,left and right key is to adjust volume.

2.8:  Talk Button: Press to talk while live audio off, press again to turn on live audio while talk function stop.

2.9: Mic of the Monitor

2.10:  Sound Detection (VOX) Button: Press to open sound detection (On the status Bar will show ) Press again to turn off sound detection(On the status Bar  will disappear)

2.11:  Power On/Off Button: Long press to turn on/off the unit ,short press to enter standby mode.

 
2.12: External Antenna: Put the antenna up the signal will reach the best state.

2.13: Bracket

2.14: Speaker

2.15: TF Card port(Support max 128GB TF card when first insert into the monitor it will remind to format please choose OK)

3. Status Introduction

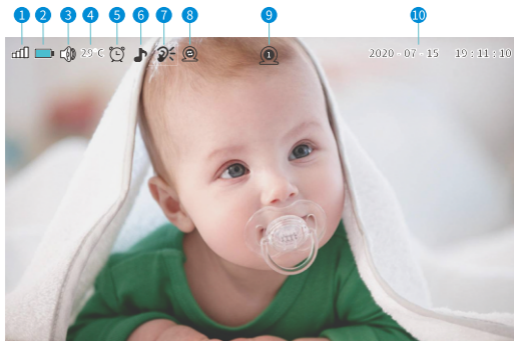

- 1 Signal
- 2 Battery Power Status
- 3 Sound
- 4 Temperature
- 5 Feeding Reminder Enable
- 6 Music Enable
- 7 Sound Detection: it will turn up if you enable VOX function.
- 8 Live Video Loop Enable
- 9 Camera Channel
- 10 Date and Time

Other icons :



:Low battery



:No signal



:Sound alarm



:Temperature alarm



 
 
: Feeder reminder

4. Connect the camera to the Monitor

4.1: Power on the camera about 3-5 s the camera will say “power on system starting up” and start to work.

4.2: Long Press the power on/off button to turn on the unit. (Tips: Kindly make sure the monitor is fully charged before connection when use for the first time)

4.3: After camera and monitor ready wait about 10S the picture will show on the monitor then could start to use the baby monitor .

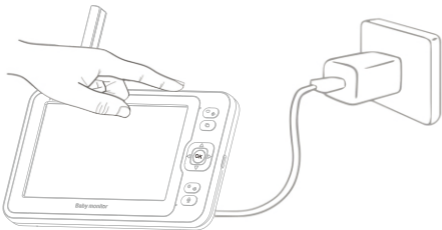
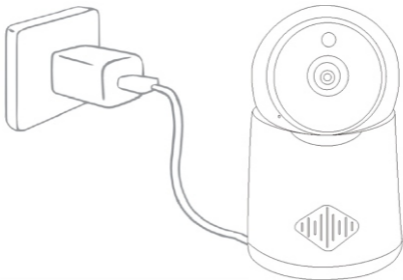


5. Add new camera

5.1: Enter the main menu and choose camera  → choose channel  → press OK button to start matching (Pic 2) → Connected.

5.2: If can't add the camera successfully please check if the camera is powered . If camera already been powered then please reset the camera and make sure the monitor and camera distance within 2meters and add the camera again according to step 5.1.

  5.3: If need to connect more than 1 camera please refer to the steps above.

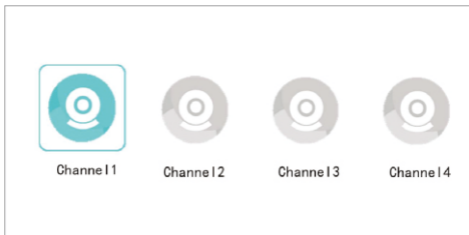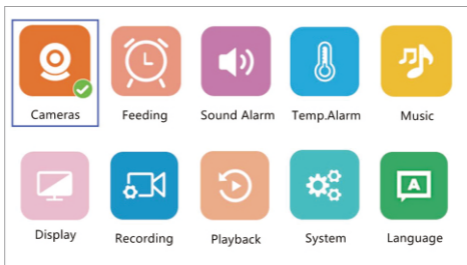



Pairing, please wait...

 
 


😊 Paired!

6.Feed Timer Setting

6.1: Enter the menu to set up Feed timer()---up and down to select time left and right choose single time/ recycle/turn on or off the clock.(you can choose single time or recycle)

6.2: If you don't need feed timer function please turn off the clock.

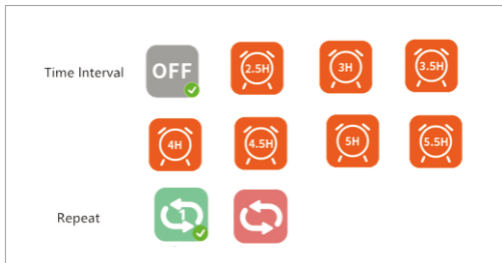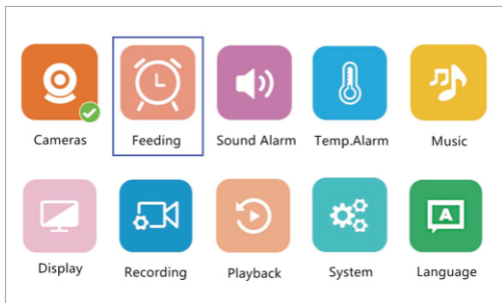


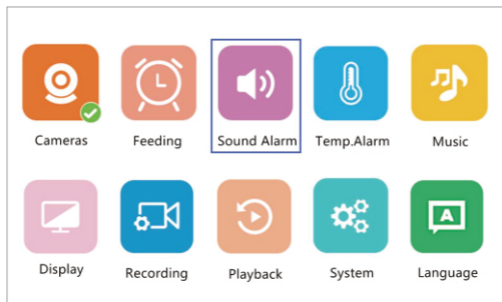 
7. Sound Detection

7.1: Press OK button to enter the main menu and choose Sound detection()

There are low/medium/high/optional.

 
7.2: Press VOX button on the top will turn on press again to turn off.(Or you can turn off in the settings)

7.3: When the camera detected the DB range over the settings the LCD screen will lighten up and show the  icon in the middle of the screen .There will be an alarm sound like di di about 30S, if the camera keep detected sound over settings it will send alarm sound continuously . Press any button on the monitor to stop the sound alarm. And press VOX button could turn off the sound alarm function.





- Tips:**
- 1、 Set sensitivity for sound detection.
 - 2、 LOW:the alarm threshold is a shouting cry.
 - 3、 MEDIUM:the alarm threshold is a loud Voice.
 - 4、 HIGH:the alarm threshold is normal speech.

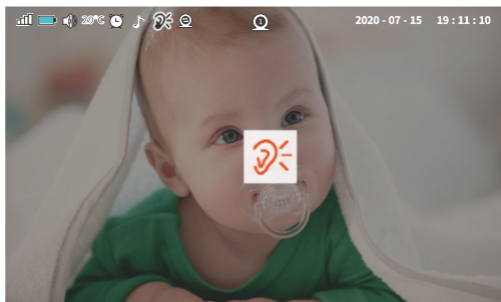


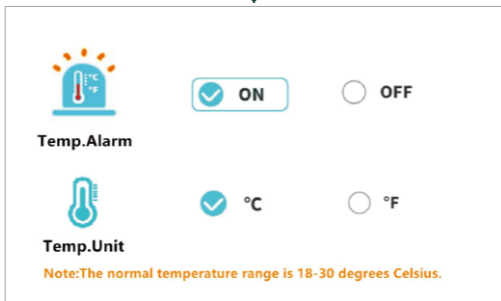 
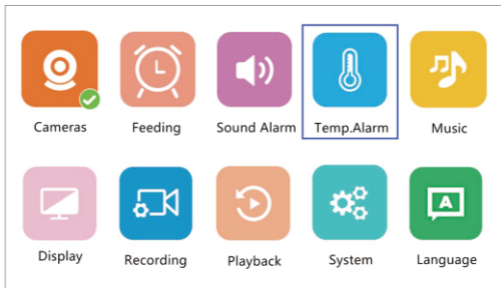 
8. Temperature Detection Alarm


8.1: Enter the main menu to choose Temp () could turn on /off the temperature alarm.

8.2: Temperature alarm setting could be (°C) or (°F) according to actual usage.




8.3: The default temperature is 18-30°C once the temperature lower or higher than the range will send alarm. (Ref to pic 5)

  
8.4: When the temperature alarm been triggered the LCD monitor will turn on and show the icon() and send di di alarm sound.(Refer to pic 5) The sound will last for 30s. If the temperature over the range continuously the monitor will keep send alarm sound , press any button to stop

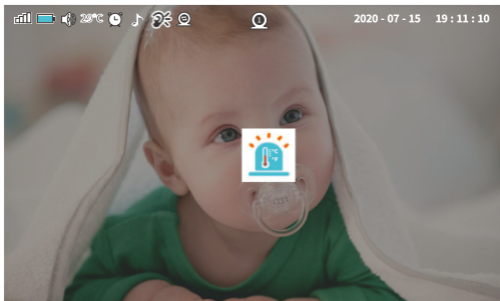







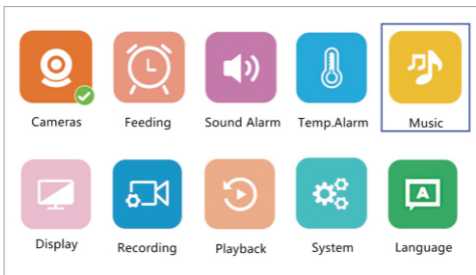






9.Play the lullaby


9.1: Enter the main menu and choose the lullaby icon () could select No.1-No.8 lullabies .You can choose Single loop () or Sequential loop.()
















Lullabies				
	1	2	3	4
Soothing Songs				
	5	6	7	8
Loop Playback			 OFF	

10. Display Settings

10.1: Enter the main menu and choose the display settings () the default sleep time is 1 min .User can adjust according to actual usage.

				
Cameras	Feeding	Sound Alarm	Temp.Alarm	Music
				
Display	Recording	Playback	System	Language

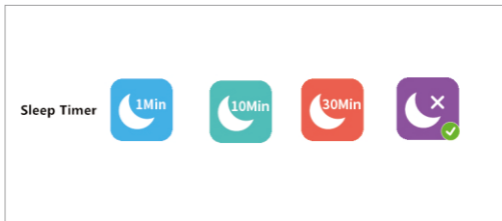 

11. Video Recording

 
 
11.1: Enter the main menu and select the record icon () if don't need this function could select to turn off .

11.2: Please adjust the monitor time and date to the local one before recording.

11.3:When the first time insert the TF card it will remind to format the card please choose OK.



11.4: The camera with TF card could recording and the resolution is 1920*1080 in mp4 format. It can't playback on the monitor while can play on the computer.


11.5: The monitor with TF card also could recording the resolution is 800*480 in AVI format you can playback directly on the monitor . If need to play on the computer need a special media player from our company please contact the retailer for assistance.

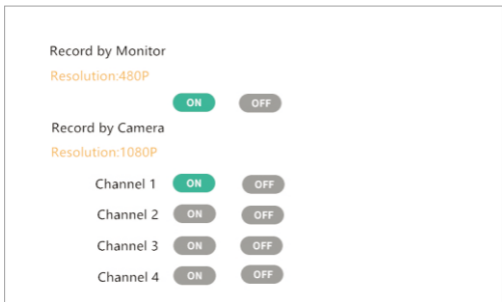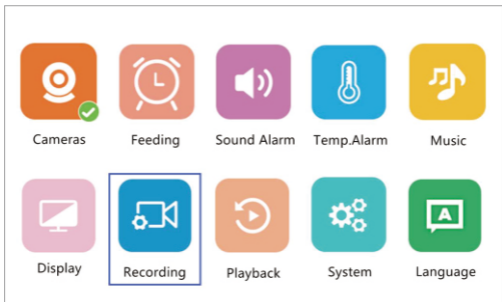

12. Video Playback

   12.1: Enter the menu and select the playback icon () and find the video you want to play then press OK.

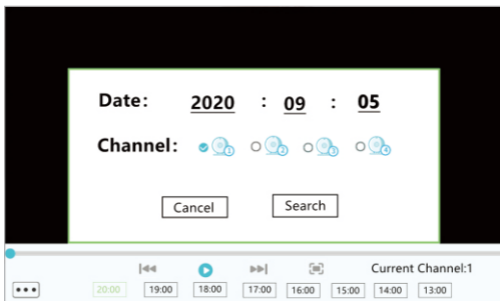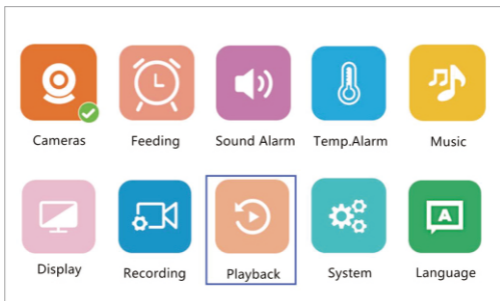


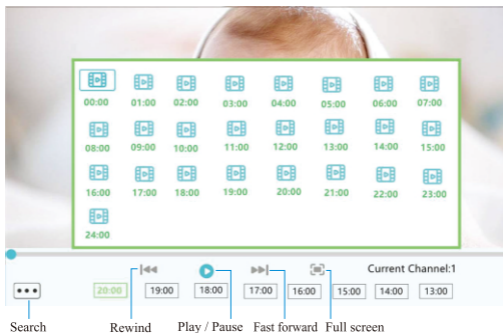



13. System Settings



13.1: Enter the main menu and select system setting () to enter the settings.

  
13.2: Time & Date setting: Please set the time and date to the local one before operation.

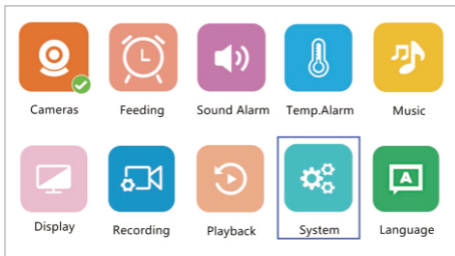

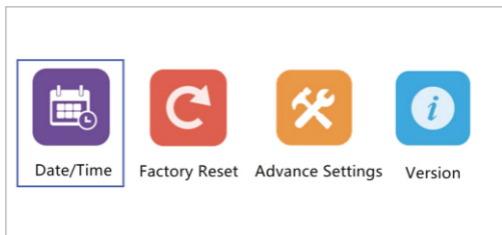


  13.3: Back to factory settings()

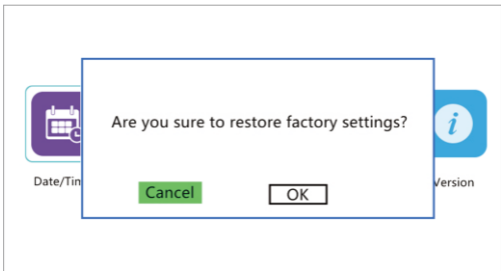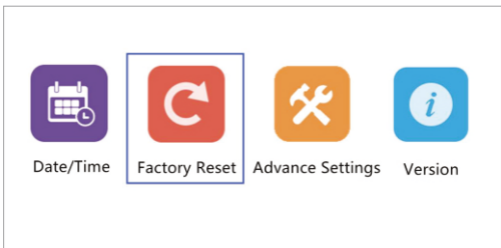

13.4: Advanced settings ():

 
- ① You can check the total capacity and remaining capacity of the TF card.
- ② Picture Flip: you can choose ON/OFF

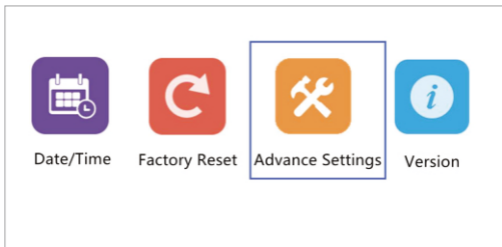

	Capacity	Avai lable	Picture Flip	
Monitor	29GB	24GB		
Channe1	14GB	0GB	<input type="button" value="OFF"/>	<input type="button" value="ON"/>
Channe2	/	/	<input type="button" value="OFF"/>	<input type="button" value="ON"/>
Channe3	/	/	<input type="button" value="OFF"/>	<input type="button" value="ON"/>
Channe4	/	/	<input type="button" value="OFF"/>	<input type="button" value="ON"/>


13.5: Version Information ()

 The version information subject to the actual situation

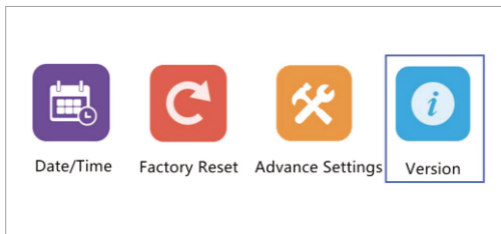


Version	XM530_BMS50X20_WVGA_16M_20200911
Release Date	2020-09-11
Serial Number	f6717b9d62713370
Channel	01
Version	XM530_RA50X20_BMC-H_8M
Release Date	2020-07-22
Serial Number	8b5f3ecd3bcc8b5b




14. Language Settings

14.1: Enter the main menu to choose the language settings () to select the language you need .After confirm the monitor will restart automatically.

 Notice: When change the language please make sure the monitor is with enough battery (The camera broadcast will sync to monitor language)

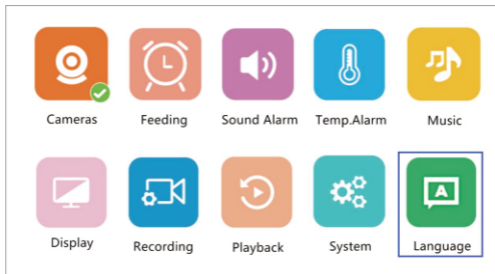

   15. Installation Steps

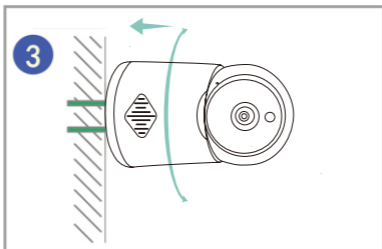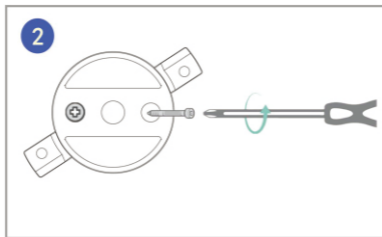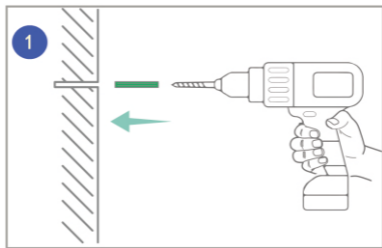

Questions and Answers:

Q: The LCD monitor didn't show the camera ?

A: ①Please check if the camera is powered on .

②If camera is powered on please reset the camera to factory settings and add the camera according to steps 4.1.

Q: There is annoying sound when use the talk function in near distance?

A: When the camera and monitor is within 2meter distance there might be some noise which is a normal Physical phenomena. You can adjust the monitor volume down or keep the camera and monitor from longer distance.

Q:The monitor battery drains fast?

A:①If you don't open the Dormant mode and the monitor will works all the time so the battery will run faster. Suggest to use Dormant mode with 30S or 60S to save battery.

②The brightness of the monitor maybe too much high could lower down the brightness to expand the standby time.

Q:The transfer distance between the camera and monitor not far?

A: In an open environment the camera and monitor could transfer as far as 300meters .While for indoor use in case of interference the transfer distance will be influenced like too many walls and wireless electronic devices .

After-sales instructions:

1. Please refer to the actual product all the instructions are for reference only.
2. Product may updates in future without notice .
3. The manual contains the introduction of the basic functions of the product please operate by yourself.
4. If there is any problem when using the product please contact the supplier in time.
5. We have tried our best to ensure the completeness and accuracy of the content in the manual, but some data may still be stored with the actual products.In case of deviation, if you have any questions or disputes, please refer to the company's final explanation.